

## 10.1 Indoor Unit Error Display

Display	LED STATUS
E0	EEPROM parameter error
E1	Indoor / outdoor units communication protection
E2	Zero-crossing signal error
E3	Fan speed out of control
E5	Open or short circuit of outdoor ambient or condenser temperature sensor
E6	Open or short circuit of indoor room or evaporator temperature sensor
P0	Inverter module (IGBT) over-strong current protection
P1	Over voltage or too low voltage protection
P2	Temperature protection of compressor top.
P4	Inverter compressor drive error

**Note: E4 & P3: Reserved function**