

SAMSUNG

**OWNER'S INSTRUCTIONS
MANUAL DE INSTRUCCIONES
MANUEL D'UTILISATION
ISTRUZIONI PER L'USO
MANUAL DE INSTRUÇÕES
GEBRAUCHSANWEISUNG
ΟΔΗΓΙΕΣ ΧΡΗΣΤΗ**

Indoor unit

SH09AW8

SH12AWHD

Outdoor unit

SH09AW8X

SH12AWHDX

Split-type Room Air Conditioner (Cool and Heat)

Aire acondicionado doméstico sistema Split (Refrigeración y Calefacción)


Climatiseur de type Séparé (Refroidissement et Chauffage)

Condizionatore d'aria per ambienti ad unità Separate (Raffreddamento e Riscaldamento)

Aparelho de ar condicionado tipo Split (Refrigeração e Aquecimento)

Geteilte raumklimaanlage (Kühlen und Wärmen)

ΔΙΑΙΡΟΥΜΕΝΟ ΚΛΙΜΑΤΙΣΤΙΚΟ ΔΩΜΑΤΙΟΥ (Ψύξης και Θέρμανσης)

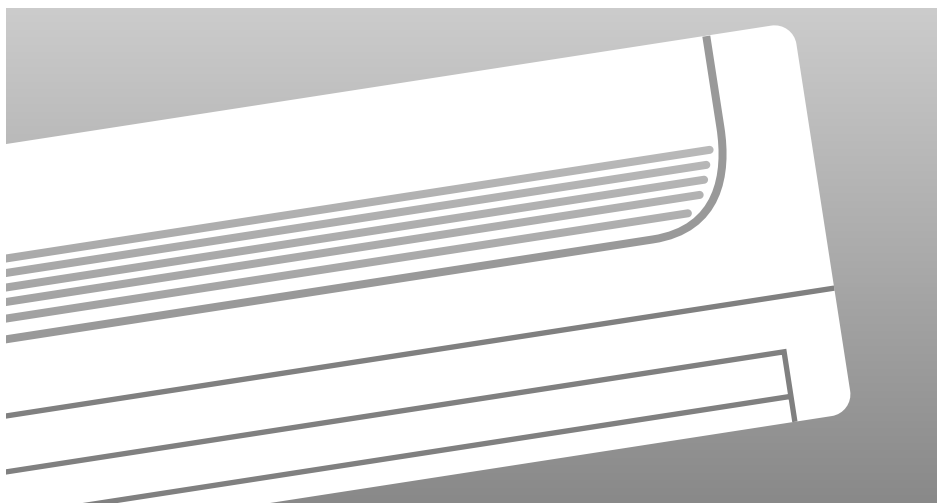

Safety Precautions

The following safety precautions must be taken when using your air conditioner.



WARNING

Risk of electric shock. • Can cause injury or death. • Disconnect all remote electric power supplies before servicing, installing or cleaning. • This must be done by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

DURING OPERATION

- ◆ Users of this product are cautioned not to attempt repair of this product at their own discretion. Instead, they are requested to directly contact a designated service center or the outlet at which the product was purchased.
- ◆ Never spill any kind of liquid into the unit. Should this happen, unplug or main switch off the unit and contact an authorized service center.
- ◆ Do not insert anything between the air outlet blades because the inner fan may be damaged and could cause injury. Keep children away from the unit.
- ◆ Do not place any obstacles in front of the unit.
- ◆ Do not spray liquid of any kind into the indoor unit. Should this happen, switch off the breaker used for your air conditioner and contact your installation specialist.
- ◆ Make sure that the unit is correctly ventilated at all times:
Do not place clothing or other materials over it.
- ◆ If the wireless remote control will not be used for a long time, remove the batteries. (If applicable)
- ◆ When using a wireless remote control, the distance should not be more than 7 meters from the air conditioner. (If applicable)

DISPOSING OF THE UNIT

- ◆ Before throwing out the device, it is necessary to pull back the battery cells and get rid of them safely for recycling reasons.
- ◆ When you need to dispose of the unit, consult your dealer. If pipes are removed incorrectly, refrigerant may blow out and come into contact with your skin, causing injury. Releasing refrigerant into the atmosphere also damages the environments.
- ◆ Please recycle or dispose of the packaging material for this product in an environmentally responsible manner.

OTHERS

- ◆ Never store or ship the air conditioner upside down or sideways to avoid damage to the compressor.
- ◆ The appliance is not intended for use by young children or infirm persons without supervision: Young children should be supervised to ensure that they do not play with the appliance.
- ◆ Max current is measured according to IEC standard for safety and current is measured according to ISO standard for energy efficiency.

Contents

◆ *PREPARING YOUR AIR CONDITIONER*

■ Safety Precautions	2
■ View of the Unit	4
■ Remote Control-Buttons and Display	6
■ Getting Started	7
■ Inserting the Remote Control Batteries	8

◆ *OPERATING YOUR AIR CONDITIONER*

■ Selecting the Automatic Operating Mode	9
■ Cooling Your Room	10
■ Heating Your Room	11
■ Removing Excess Humidity	12
■ Airing Your Room	13
■ Changing the Room Temperature Quickly	14
■ Selecting Energy Saving Mode	15
■ Adjusting the Air Flow Direction Vertically	16
■ Adjusting the Air Flow Direction Horizontally	17

◆ *PROGRAMMING YOUR AIR CONDITIONER*

■ Setting the On Timer	18
■ Setting the Off Timer	19
■ Setting the Sleep Timer	20
■ Setting the 1 Hour Timer	21


◆ *RECOMMENDATIONS FOR USE*

■ Operating Recommendations	22
■ Temperature and Humidity Ranges	23
■ Operating Your Air Conditioner Without the Remote Control	23
■ Solving Common Problems	24
■ Cleaning Your Air Conditioner	25
■ Cleaning Deodorizing and Bio filter (Option)	25

View of the Unit


The design and shape are subject to change according to the model.

Indoor Unit

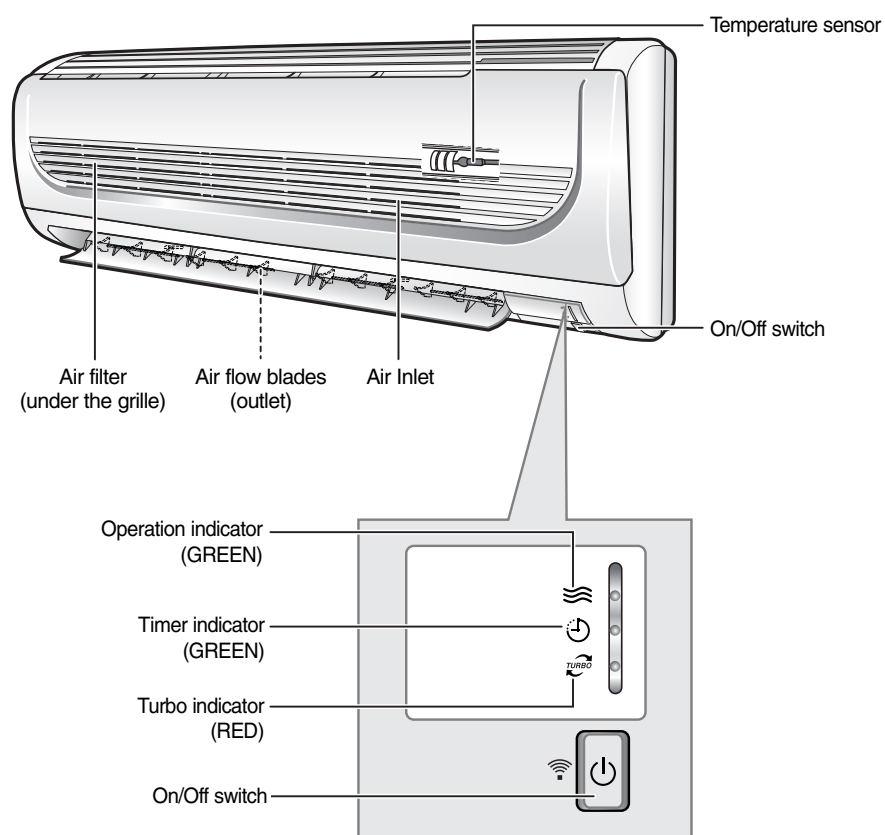


Outdoor Unit


SH09AW8X

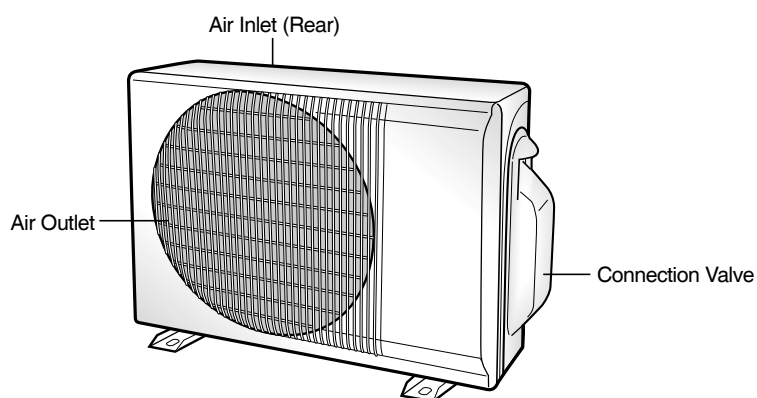**Outdoor Unit**


SH12AWHDX

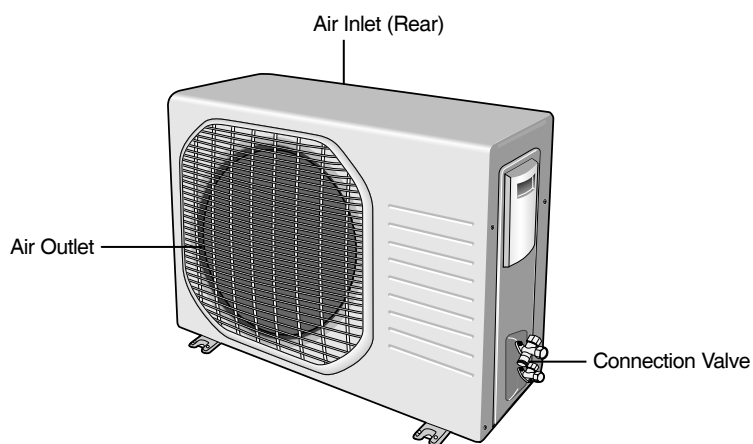

Remote Control - Buttons and Display

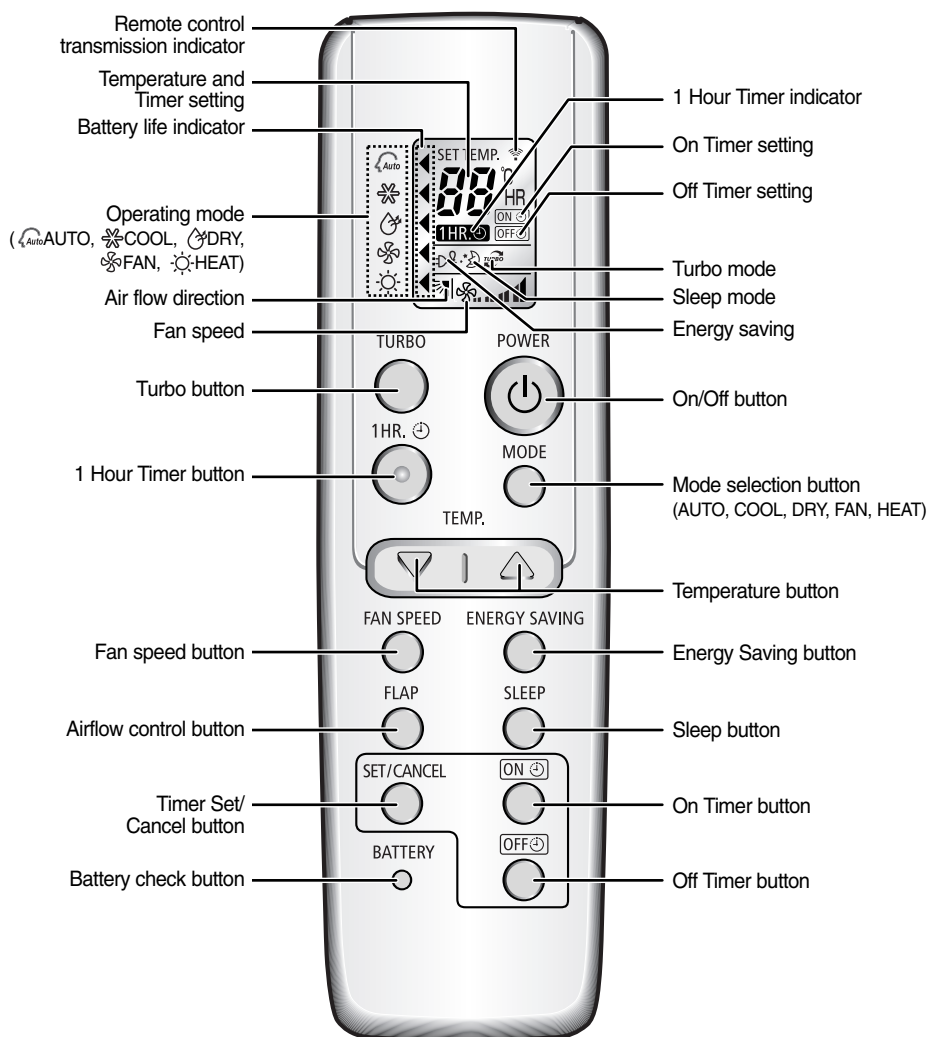

Note

- ◆ Each mode indicator shows each mode as well as the battery life. If you want to check the battery, press the  button.
- ◆ The more is a battery life indicator, the longer will remain the battery life. If one battery life indicator remains, replace new batteries.

Getting Started


You have just purchased a split type air conditioner and it has been installed by your installation specialist.

Your Owner's Instructions contains valuable information on using your air conditioner. Please take the time to read it as it will help you take full advantage of the unit's features.

The booklet is organized as follows.

- ◆ *The following figures are shown on pages from 4 to 6 :*
 - *Indoor and outdoor units*
 - *Remote control(buttons and display)**They will help you find the buttons and understand the symbols displayed.*
- ◆ *In the manual, you will find a series of step-by-step procedures for each function available.*

The illustrations in the step-by-step procedures use three different symbols:

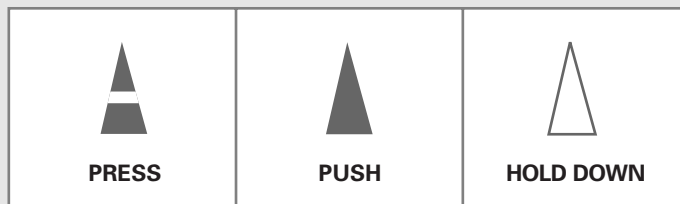


Inserting the Remote Control Batteries

You must insert or replace the remote control batteries when :


- ◆ **You purchase the air conditioner**
- ◆ **The remote control does not work correctly**

Note

- ◆ Use two AAA, LR03 1.5V batteries.
- ◆ Do not use old batteries or different kinds of batteries together.
- ◆ Batteries may be completely discharged after 12 months, even if they have not actually been used.

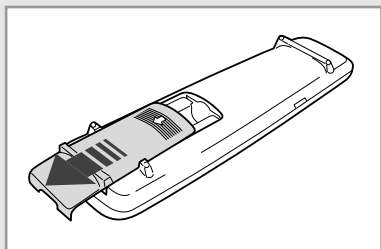

- 1** Push the battery cover on the rear of the remote control with your thumb in the direction of the arrow and remove it.

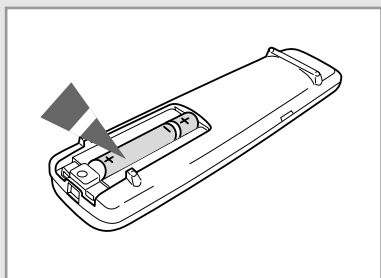


- 2** Insert the two batteries, taking care to respect the polarities :
 - ◆ + on the battery with + on the remote control.
 - ◆ - on the battery with - on the remote control.

- 3** Close the cover by sliding it back until it clicks into place.

Selecting the Automatic Operating Mode

You can start the air conditioner in Auto mode from your remote control. In the Auto mode, the cooling and heating operation is selected automatically. You can also raise or lower the temperature and the fan speed in the Auto mode.

- 1 If necessary, press the  button.



Result:

- ◆ The operation indicator on the indoor unit lights up.
- ◆ The air conditioner starts up in the mode selected when the unit was last used.
- ◆ The indoor unit beeps.

 
IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped



It will start up normally after three minutes.

- 2 If the  is not displayed at the top of the remote control, press the  button on the remote control one or more times until it appears.



Result:



- ◆ The indoor unit beeps each time you press the  button.
- ◆ The air conditioner runs in the Auto mode.
- ◆ The Auto mode cools and heats the room in optimum condition by adjusting the indoor temperature depending on the set temperature.
- ◆ The mode may change from cooling into heating, from heating into cooling depending on the current temperature during operation.

Note You can change modes at any time.



- 3 To adjust the temperature, press the  |  button one or more times until the required temperature is displayed. Possible temperatures are between 16°C and 30°C inclusive.

 Result:

- ◆ Each time you press the  |  button:
 - The temperature is adjusted by 1°C
 - The indoor unit beeps

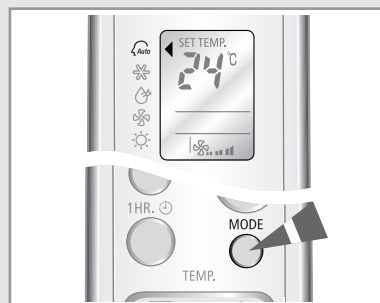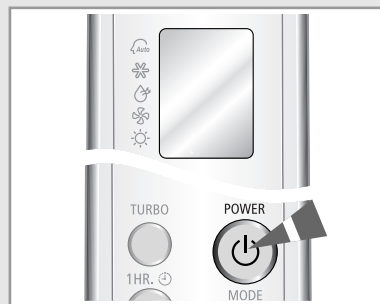


Cooling Your Room

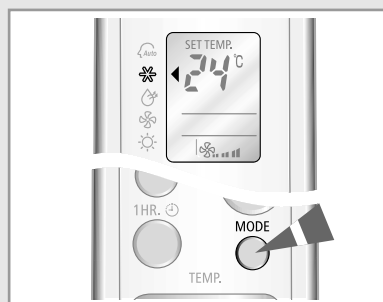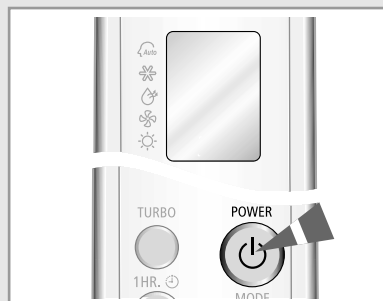

You must select the Cool mode if you wish to adjust the:

- ◆ *Cooling temperature*
- ◆ *Fan speed when cooling*

- 1 If necessary, press the  button.



Result:

- ◆ The operation indicator on the indoor unit lights up.
- ◆ The air conditioner starts up in the mode selected when the unit was last used.
- ◆ The indoor unit beeps.


IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped


 
It will start up normally after three minutes.

- 2 If the  is not displayed at the top of the remote control, press the  button on the remote control one or more times until it appears.

Result:


 
- ◆ The indoor unit beeps each time you press the  button.
- ◆ The air conditioner runs in the Cool mode.


Note You can change modes at any time.




 
 




- 3 To adjust the temperature, press the  |  button one or more times until the required temperature is displayed.


Possible temperatures are between 16°C and 30°C inclusive.

Result:

- ◆ Each time you press the  |  button:
 - The temperature is adjusted by 1°C
 - The indoor unit beeps
- ◆ The air conditioner starts cooling, provided that the room temperature is higher than the selected temperature.
- ◆ If the room temperature reaches the set temperature, the air conditioner stops cooling, but the fan is still operating.

- 4 Select the fan speed by pressing the  button one or more times until the required setting is displayed:

-  Automatic (rotated :  →  →  → )
-  Low
-  Medium
-  High
-  Maximum

Result: Each time you press the  button, the indoor unit beeps.

- 5 To control the direction of the air flow, refer to pages 16 and 17.

Heating Your Room

You must select the Heat mode if you wish to adjust the:

- ◆ Heating temperature
- ◆ Fan speed when heating



1 If necessary, press the  button.


- Result:**
- ◆ The operation indicator on the indoor unit lights up.
 - ◆ The air conditioner starts up in the mode selected when the unit was last used.
 - ◆ The indoor unit beeps.

IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:


 
- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.


 
2 If the  is not displayed at the top of the remote control, press the  button on the remote control one or more times until it appears.


- Result:**
- ◆ The indoor unit beeps each time you press the  button.
 - ◆ The air conditioner runs in the Heat mode.



 
 



 
Note You can change modes at any time.


3 To adjust the temperature, press the  |  button one or more times until the required temperature is displayed.

Possible temperatures are between 16°C and 30°C inclusive.



- Result:**
- ◆ Each time you press the  |  button:
 - The temperature is adjusted by 1°C
 - The indoor unit beeps
 - ◆ If the room temperature reaches the set temperature (selected temperature+5°C), the air conditioner stops heating, but the fan is still operating.
 - ◆ The air conditioner starts heating, provided that the room temperature is lower than the desired temperature (selected temperature+3°C).

4 Select the fan speed by pressing the  button one or more times until the required setting is displayed:

-  Automatic (rotated :  →  → )
-  Low
-  Medium
-  High
-  Maximum


- Result:**
- ◆ Each time you press the  button, the indoor unit beeps.
 - ◆ For the first three to five minutes, the fan operates very slowly until the air has been sufficiently warmed. Once the correct temperature has been reached, the fan is automatically set to the required speed.

5 To control the direction of the air flow, refer to pages 16 and 17.

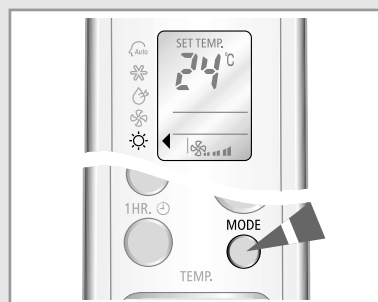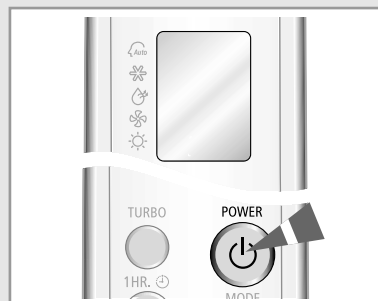

Removing Excess Humidity

If the atmosphere in your room is very humid or damp, you can remove excess humidity without lowering the room temperature too much.

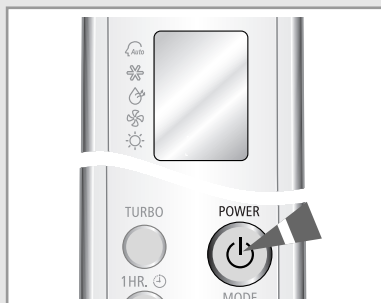

- 1 If necessary, press the  button.


Result:



- ◆ The operation indicator on the indoor unit lights up.
- ◆ The air conditioner starts up in the mode selected when the unit was last used.
- ◆ The indoor unit beeps.

IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:


- ◆ Plugged in
- ◆ Stopped

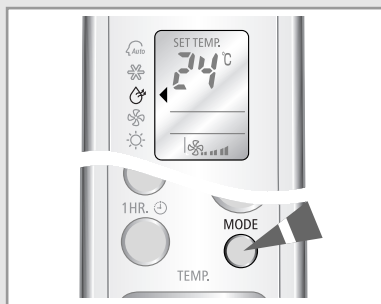It will start up normally after three minutes.






- 2 If the  is not displayed at the top of the remote control, press the  button on the remote control one or more times until it appears.

Result:

- ◆ The indoor unit beeps each time you press the  button.
- ◆ The air conditioner runs in the Dry mode.

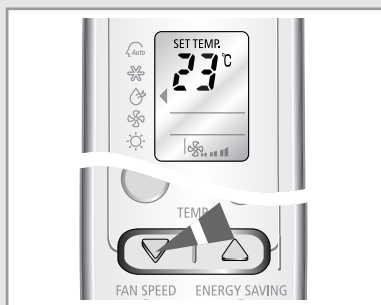

Note You can change modes at any time.



- 3 To adjust the temperature, press the  |  button one or more times until the required temperature is displayed.

Possible temperatures are between 16°C and 30°C inclusive.

Result:

- ◆ Each time you press the  |  button:
 - The temperature is adjusted by 1°C
 - The indoor unit beeps
- ◆ The air conditioner starts removing the excess humidity; the quantity of air is adjusted automatically.

- 4 To control the direction of the air flow, refer to pages 16 and 17.



Airing Your Room

If the atmosphere in your room is stale, you can air the room using the Fan feature.


- 1 If necessary, press the  button.

Result:


- ◆ The operation indicator on the indoor unit lights up.
- ◆ The air conditioner starts up in the mode selected when the unit was last used.
- ◆ The indoor unit beeps.




- 2 If the  is not displayed at the top of the remote control, press the  button on the remote control one or more times until it appears.

Result:

- ◆ The indoor unit beeps each time you press the  button.
- ◆ The air conditioner runs in the Fan mode.
- ◆ The temperature is set automatically.



Note You can change modes at any time.

- 3 Select the fan speed by pressing the  button one or more times until the required setting is displayed:

 Low
 Medium
 High

Result: Each time you press the  button, the indoor unit beeps.

- 4 To control the direction of the air flow, refer to pages 16 and 17.

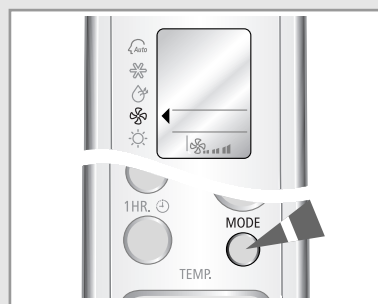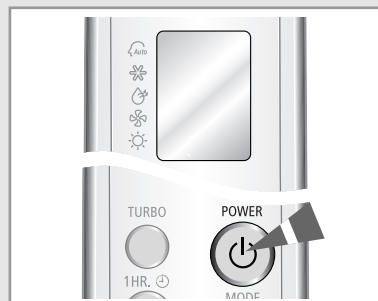



Changing the Room Temperature Quickly

The Turbo cooling/heating function is used to cool or heat your room as quickly as possible.

Example : You have just come home and find that the room is very hot. You wish to cool it down as quickly as possible.


The Turbo function operates for 30 minutes with the maximum settings before returning automatically to the mode and temperature previously selected.

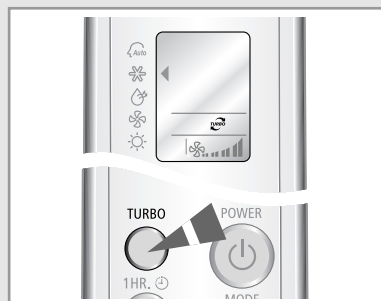

-
- 1** If necessary, press the  button.



Result:

- ◆ The operation indicator on the indoor unit lights up.
- ◆ The air conditioner starts up in the mode selected when the unit was last used.
- ◆ The indoor unit beeps.

-
- 2** Press the  button.

Result:

- ◆ The temperature and fan settings are adjusted automatically.
- ◆ The air conditioner cools or heats the room as quickly as possible.
- ◆ After 30 minutes, the air conditioner is reset automatically to the previous mode, temperature and fan settings.
- ◆ You can select the Turbo function in the Auto, Cool and Heat mode. If you select this function in the Dry or Fan mode, it will return to the Auto mode.


-
- 3** If you wish to stop the Turbo function before the end of the 30-minute period, press the  button one or more times until  disappears.

Result: The air conditioner is reset automatically to the previous mode, temperature and fan settings.

-
- 4** To control the direction of the air flow, refer to pages 16 and 17.
-

Selecting Energy Saving Mode

You can save energy even during operation in the Cool and Heat mode. In the Cool mode, the temperature will rise and in the Heat mode, the temperature will fall, resulting in saving energy.

- 1 If necessary, press the  button.

Result:

- ◆ The operation indicator on the indoor unit lights up.
- ◆ The air conditioner starts up in the mode selected when the unit was last used.
- ◆ The indoor unit beeps.


IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped



It will start up normally after three minutes.


- 2 Press the  button.

Result:


- ◆ The indoor unit beeps.
- ◆ The air conditioner runs in the Energy saving mode.
- ◆ The outer air flow blade moves up and down.
- ◆ To stop the Energy saving mode, press the  again.

Note You can select the Energy saving mode in the Cool and Heat mode.

- 3 To adjust the temperature, press the  |  button one or more times until the required temperature is displayed.

- 4 To select the fan speed, press the  button one or more times until the required setting is displayed.


- 5 To control the direction of the air flow, refer to pages 16 and 17.

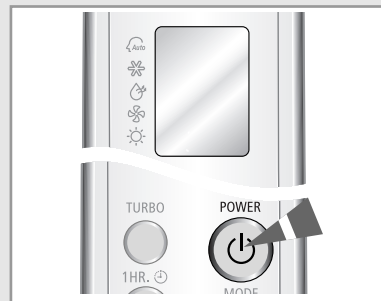


Adjusting the Air Flow Direction Vertically




Depending on the position of the indoor unit on the wall of your room, you can adjust the position of the outer air flow blade on the bottom of the unit, thus increasing the efficiency of the air conditioner.

- 1 Press the  button one or more times as required.

Result: The outer blade is adjusted vertically.

- 2 If you want the blade to move up and down automatically when the air conditioner is operating, press the  button.

Result: The blade move up and down, around the base position set.

- 3 To stop the blade moving up and down, press the  button again.


Note *If you switch the air conditioner... Then the blade is...*

Off	Closed completely.
On again	Set to the initial position powered.


Adjusting the Air Flow Direction Horizontally

There are two sets of inner air flow blades. Just as the outer air flow blade can be adjusted vertically, the inner blades can be adjusted horizontally.

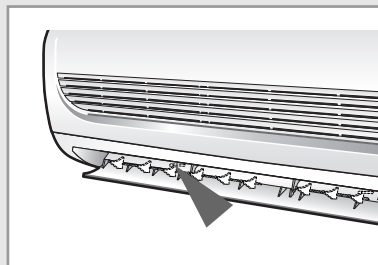


- 1 Adjust each set of inner blades to the required position, by pushing or pulling them sideways.

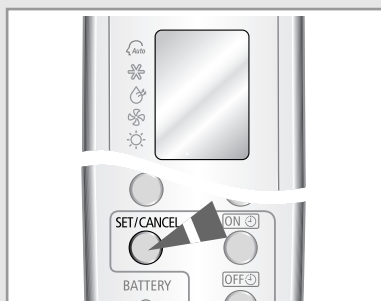

Setting the On Timer



The On Timer enables you to switch on the air conditioner automatically after a given period of time. You can set the period of time from 1 hour to 24 hours.

- 1 To set the operating time, press the  button one or more times until the required time is displayed. Possible time is between 1 hour and 24 hour inclusive.
- 2 Press the  button to complete the setting.
Result:
 - ◆ The remaining time is displayed.
 - ◆ Blinking of the timer indicator stops.
 - ◆ The selected mode and the temperature on the display disappear after 10 seconds.
 - ◆ The air conditioner will switch on automatically when the counter displayed on the remote control reaches the set time and disappears the On Timer setting.
- 3 To select an operating mode in advance, press the  button until the desired mode is displayed at the top of the remote control.
Result: The air conditioner will run in the selected mode when it is turned on.

Note If you don't operate the remote control after setting the On Timer, it will be turned off automatically after 25 hours.

To Cancel the On Timer


If you no longer wish to use the On Timer that you have set, you can cancel it at any time.


Press the  button.

Note If you want to turn on the air conditioner before the timer reaches the setting time, press the  button.

Setting the Off Timer

The Off Timer enables you to switch off the air conditioner automatically after a given period of time. You can set the period of time from 1 hour to 24 hours.





- 1 To set the operating time, press the  button one or more times until the required time is displayed. Possible time is between 1 hour and 24 hour inclusive.


 
 
- 2 Press the  button to complete the setting.

Result:

- ◆ The remaining time is displayed.
- ◆ Blinking of the timer indicator stops.
- ◆ The air conditioner will switch off automatically when the counter displayed on the remote control reaches the set time and disappears the Off Timer setting.

Example If you would like to turn the air conditioner on after 2 hours and to operate it for 2 hours:

1. Press the  button until '2 Hr' is displayed.
2. Press the  button.
3. Press the  button until '4 Hr' is displayed.
4. Press the  button.

Note You can see or change the setting mode and/or the temperature by pressing the  button or the  |  button after setting the Off Timer.



To Cancel the Off Timer

If you no longer wish to use the Off Timer that you have set, you can cancel it at any time.

Press the  button.

Note If you want to turn off the air conditioner before the timer reaches the setting time, press the  button.





Setting the Sleep Timer


The Sleep Timer can be used when you are cooling or heating your room to switch the air conditioner off automatically after a period of six hours.

Note If you wish to switch the unit off at a specific time, refer to page 19.




- 1 Make sure that you have selected either the Cool or Heat mode.
 - 2 Press the  button one or more times until the  indicator appears on the remote control.
- Result:**
- ◆ The indoor unit beeps.
 - ◆ The air conditioner will be controlled as indicated in the illustrations below.

Cooling The desired temperature is increased by 1°C every hour. When it has been increased by 2°C (after two hours), the temperature is maintained for four hours.

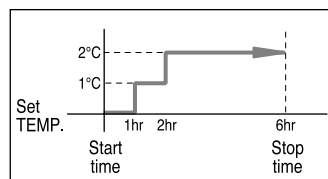


Heating The desired temperature is decreased by 1°C every hour. When it has been decreased by 2°C (after two hours), the temperature is maintained for four hours.

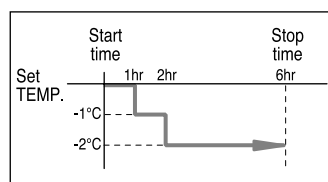

To Cancel the Sleep Timer

If you no longer wish to use the Sleep Timer that you have set, you can cancel it at any time.



Press the  button.

- Result:**
- ◆ The indoor unit beeps.
 - ◆ The  indicator is no longer displayed.
 - ◆ The air conditioner operates normally.




Setting the 1 Hour Timer

The 1 Hour Timer enables each mode to operate only for an hour and stop automatically with just one touch of the 1 Hour Timer button. It is good for you when you feel setting the Off Timer by pressing the Off Timer button several times is unnecessary and inconvenient.

- 1 Press the  button one or more times until the  indicator appears on the remote control.

Result:

- ◆ The indoor unit beeps.
- ◆ The air conditioner will stop operating after an hour automatically.

- 2 To select an operating mode under the set 1 Hour Timer, press the  button until the desired mode is displayed at the remote control.

Result: The air conditioner will run and stop operating in the selected mode with the 1 Hour Timer set.


Note If you operate the 1 Hour Timer when the air conditioner is turned off, the air conditioner will start operating and be turned off after an hour.

To cancel the 1 Hour Timer

If you no longer wish to use the 1 Hour Timer that you have set, you can cancel it at any time.

Press the  button.

Result:

- ◆ The indoor unit beeps.
- ◆ The  indicator is no longer displayed.
- ◆ The air conditioner operates normally.



Operating Recommendations

Here are a few recommendations that you should follow when using your air conditioner.

Topic	Recommendation
Heating performances	The heat pump inside the air conditioner absorbs heat from outside air and brings it indoors. If the temperature of the outside air drops, the air conditioner will heat less. If you find that the room is not warm enough, use an additional heating appliance.
Warm air circulation	The air conditioner circulates warm air to heat your room; as a result, some time will be required after starting the air conditioner to warm the entire room. If necessary, set the air conditioner on before you wish to use the room.
Frost	<p>When outside temperatures are low and humidity is high, frost may form in the outdoor unit when heating is selected.</p> <p>If this happens:</p> <ul style="list-style-type: none">◆ The heating operation is stopped.◆ The Deice mode is triggered automatically for about seven minutes. <p>No intervention is required from you; after about seven minutes, the air conditioner starts operating again normally.</p>
High indoor and outdoor temperatures	If both the indoor and outdoor temperatures are high and you select the Heat mode, the outdoor unit's fan and compressor may stop at times. This is normal; simply wait until the air conditioner switches on again.
Power failure	If a power failure occurs when the air conditioner is operating, the unit is switched off. When the power returns, the air conditioner starts up again automatically.

Temperature and Humidity Ranges

The following table indicates the temperature and humidity ranges within which the air conditioner can be used.

If the air conditioner is used at...	Then...
High temperatures	The automatic protection feature may be triggered and the air conditioner stopped.
Low temperatures	A water leak or some other malfunction may occur if the heat exchanger freezes.
High humidity levels	Water may condense on and drip from the surface of the indoor unit if it is used for long periods.

Mode	Outdoor Temperature	Indoor Temperature	Indoor Humidity
Heating	0°C to 24°C approx.	27°C or less	-
Cooling	19°C to 43°C approx.	16°C to 32°C approx.	80% or less
Drying	19°C to 43°C approx.	16°C to 32°C approx.	-

※ *If the outdoor temperature is as low as 0°C, the heating capacity drops up to 70~80% depending on the operating condition.*

If the cooling operation is used at over 32°C(indoor temperature), it does not cool at its full capacity.

Operating Your Air Conditioner Without the Remote Control

Your air conditioner can be operated directly from the indoor unit if the remote control is lost or broken.

- To switch the air conditioner on, press the ON/OFF switch on the right side of the indoor unit.



Result:

- ◆ The OPERATION indicator on the indoor unit comes on.
- ◆ The indoor unit beeps.
- ◆ The air conditioner starts up in the most suitable mode for the room temperature. The mode may change from cooling into heating, from heating into cooling depending on the current temperature during operation:

Room Temperature	Operating Mode
Less than 24°C	Heat
24°C or above	Cool



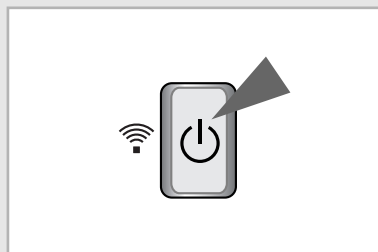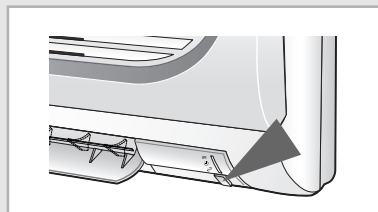


- To switch the air conditioner off, press the ON/OFF switch again.

Note Even if the air conditioner has been switched on via the ON/OFF switch, operations can still be controlled using the remote control as usual.



Solving Common Problems

Before contacting the after-sales service, perform the following simple checks. They may save you the time and expense of an unnecessary call.

Problem	Explanation/Solution
The air conditioner does not operate at all	<ul style="list-style-type: none"> ◆ Check that the breaker used for the air conditioner is switched on. ◆ Check that the operation indicator on the indoor unit is on; if necessary press the  button on the remote control. ◆ Check whether the Timer indicator on the indoor unit is switched on. If so: <ul style="list-style-type: none"> - Wait until the switch-on time is reached and the air conditioner starts up automatically - Cancel the timer (see pages 18 and 19 for further details)
The air conditioner does not operate with the remote control	<ul style="list-style-type: none"> ◆ Check that there are no obstacles between you and the indoor unit. ◆ Check the remote control batteries. ◆ Check that you are close enough to the indoor unit (seven meters/ yards or less).
No beep is heard when you press the  on the remote control	<ul style="list-style-type: none"> ◆ Check that you are pointing the remote control at the remote control sensor in the right of the indoor unit. ◆ Replace the remote control batteries if necessary.
The air conditioner does not cool or heat	<ul style="list-style-type: none"> ◆ Check that the correct operating mode has been selected (Auto, Cool, Heat). ◆ The room temperature may be too low or too high. ◆ Dust may be blocking the air filter guard; refer to page 25 for cleaning instructions. ◆ Check that there is no obstacle in front of the outdoor unit.
When heating, the required room temperature is never reached and the air conditioner frequently stops	<ul style="list-style-type: none"> ◆ Check that the required temperature has been set correctly. ◆ Increase the fan speed. ◆ If the air flow is directed upwards, use the remote control to direct it downwards.
The fan speed does not change when you press the  button	<ul style="list-style-type: none"> ◆ Check that the operating mode is set to the Auto, Cool, Heat or Fan mode ; in the Dry mode, the fan speed changes automatically.
The air flow direction does not change when you press the  button	<ul style="list-style-type: none"> ◆ Check that the air conditioner has been switched on; if necessary, press the  button on the remote control.
The timer is not correctly triggered	<ul style="list-style-type: none"> ◆ Check that the timer has been programmed correctly; see pages 18 and 19.
Odour is permeated in the room during air conditioning	<ul style="list-style-type: none"> ◆ Air the room.




Cleaning Your Air Conditioner

To get the best possible use out of your air conditioner, you must clean it regularly to remove the dust that accumulates on the air filter.

IMPORTANT Before cleaning your air conditioner, ensure that you have switched off the breaker used for the unit.

- 1 Open the upper front grille by pulling the lower right and left tabs of the grille.
- 2 Pull air filters out of each tab of the grille.
- 3 Remove all dust on the air filters with a vacuum cleaner or brush.
- 4 When you finished, insert air filters by fixing it to each tab of the grille.
- 5 To close the front grille, fix it to hooks and push down the lower right and left tabs of the grille.
- 6 Clean the front grille with a damp cloth and mild detergent (do NOT use benzene, solvents or other chemicals).

Note If you have not used the air conditioner for a long period of time, set the fan going for three to four hours to dry the inside of the air conditioner thoroughly.

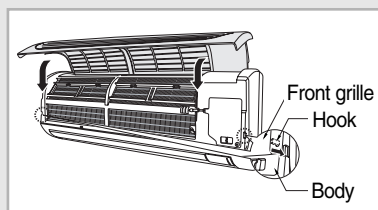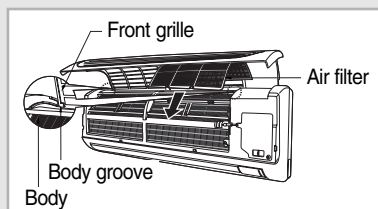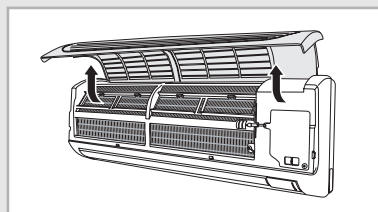


Cleaning Deodorizing and Bio filter (Option)

To remove minute dust particles and odors, deodorizing and Bio filter are installed in the air conditioner. You should clean the filters every 3 months.

- 1 Open the upper front grille by pulling the lower right and left tabs of the grille.
- 2 Pull out the deodorizing and Bio filter.
- 3 Wash the filters with clean water, then dry them in the shade.
- 4 Insert the filters into the original position.

Note You can change the position of filters with each other.

- 5 Close the front grille.

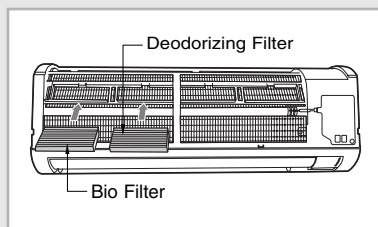

**THIS AIR CONDITIONER IS MANUFACTURED BY:
ESTE AIRE ACONDICIONADO HA SIDO FABRICADO POR:
CE CLIMATISEUR EST FABRIQUE PAR:
QUESTO CONDIZIONATORE D'ARIA È PRODOTTO DA:
ESTE APARELHO DE AR CONDICIONADO É FABRICADO POR:
DIESE KLIMAANLAGE IST FABRIZIERT VON:
ΑΥΤΗ Η ΣΥΣΚΕΥΗ ΚΑΤΑΣΚΕΥΑΣΤΗΚΕ ΑΠΟ:**



ELECTRONICS