


## 3. Alignment and Adjustments

### 3-1 Test Mode

#### ■ How to Approach Test Mode

You can approach the Test Mode by pressing the on/off switch of indoor unit for 5 seconds.

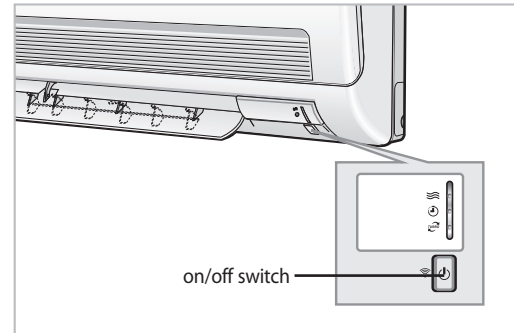

#### ■ Test Mode Operation Option




After installing the air conditioner, check whether each subordinate is normally operated or not by operating the Test Mode.

- **When an error occurs, display the Error Mode.**
- **Operation Mode :** Cool mode. Operate the cool mode by operating the compressor by force without the compressor ON/OFF according to the set temperature/indoor temperature. (Do not follow the antifreeze control)
- **Up-down louver :** Up-down swing mode
- **Indoor Fan :** High



• Because the Test Mode operate the cool mode by force not related to the set temperature / indoor temperature, check whether each subordinate is operated normally or not after completing installation and must turn off the power of the air conditioner.

### 3-2 Indoor Display Error and Check Method

Description	LAMP			Main Checking Point
	OPERATION	TIMER	TURBO	
				
Indoor unit room temperature sensor error (open or short)	○	●	○	3-2P
Indoor unit heat exchanger temperature sensor error (open or short)	●	●	○	3-3P
Indoor fan motor malfunction	○	○	●	3-4P
EEPROM error	●	●	●	Option Setting
Option error (option wasn't set up or option data error)	●	●	●	Option Setting
Outdoor unit error	●	○	●	Remote Control on/off Outdoor Unit Power Reset

● : Lamp on, ○ : Lamp off, ◐ : Lamp blink

### 3-3 Outdoor LED Error Display and Check Method



No.	LED Display			Explanation
	Yellow	Green	Red	
1	○	○	○	Power off/VDD NG
2	○	○	◎	IPM Over Current(O.C)
3	○	○	●	Abnormal Serial communication
	○	●	●	
4	○	◎	○	Compressor Starting error
5	○	◎	●	Normal Operation
6	○	●	○	Compressor Lock error
7	○	●	◎	DC-Link voltage under/over error
8	◎	○	◎	Outdoor temperature sensor error
9	◎	○	●	Discharge over temperature
10	◎	◎	○	Discharge temperature sensor error
11	◎	◎	●	Current sensor error
12	◎	●	○	Compressor limit error
13	◎	●	◎	Coil temperature sensor error
14	◎	●	●	1min. Time out Communication
15	●	○	○	Fan error
16	●	○	◎	OTP error
17	●	○	●	Compressor rotation error
18	●	◎	○	Operation condition secession(Dual only)
19	●	◎	◎	DC-Link voltage sensor error
20	●	◎	●	I_Trip error / PFC Over current
21	●	●	○	GAS Leak error
22	●	●	◎	AC Line Zero Cross Signal out
23	●	●	●	Power ON reset(1sec)
24	◎	○	○	Capacity miss match
25	○	◎	◎	Test Operation at Cooling Mode
26	◎	◎	◎	Test Operation at Heating Mode


● : LED ON, ○ : LED OFF, ◎ : LED BLINK

### 3-4 Setting Option Setup Method


ex) Option No. : 084777-17524E



#### Step 1 : Enter the Option Setup mode.

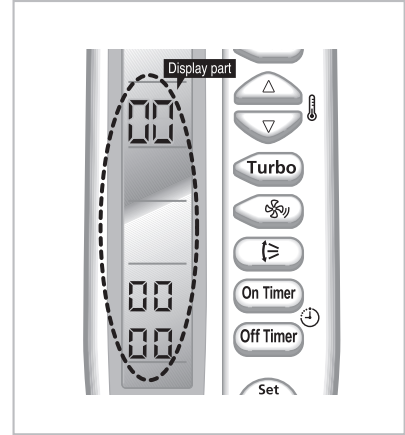







- 1<sup>st</sup> Take out the batteries of remote control.
- 2<sup>nd</sup> Press the temperature  button simultaneously and insert the battery again.
- 3<sup>rd</sup> Make sure the remote display shown as .




#### Step 2 : Enter the Option Setup mode and select your option according to the following procedure.

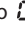




\* Setting is not required if you must  a value which has a  default.


- 1 The default value is . Otherwise, push the  button to . Every time you push the button, the display panel reads *1* or *0* repeatedly.
- 2 Push the  button to set the display panel to *8*. Every time you push the button, the display panel reads *0* → *1* → *2* → *3* → ... *9* → *A* → *b* → *c* → *d* → *E* → *F* repeatedly.
- 3 Push the  button to set the display panel to *4*. Every time you push the button, the display panel reads *0* → *1* → *2* → *3* → ... *9* → *A* → *b* → *c* → *d* → *E* → *F* repeatedly.
- 4 Push the  button to set the display panel to *7*. Every time you push the button, the display panel reads *0* → *1* → *2* → *3* → ... *9* → *A* → *b* → *c* → *d* → *E* → *F* repeatedly.
- 5 Push the  button to set the display panel to *7*. Every time you push the button, the display panel reads *0* → *1* → *2* → *3* → ... *9* → *A* → *b* → *c* → *d* → *E* → *F* repeatedly.
- 6 Push the  button to set the display panel to *7*. Every time you push the button, the display panel reads *0* → *1* → *2* → *3* → ... *9* → *A* → *b* → *c* → *d* → *E* → *F* repeatedly.





\* Setting is not required if you must  
a value which has a 0 default.


**7** Press  button, then the default value is .

**8** Push the  button to set the display panel to 7.  
Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.


**9** Push the  button to set the display panel to 5.  
Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.


**10** Push the  button to set the display panel to 2.  
Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.


**11** Push the  button to set the display panel to 4.  
Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.


**12** Push the  button to set the display panel to E.  
Every time you push the button, the display panel reads 0 → 1 → 2 → 3 → ... 9 → A → b → c → d → E → F repeatedly.

**Step 3 : Upon completion of the selection, check you made right selections.**


Press the Mode Selection key,  to set the display part to 0 and check the display part.

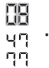➔ The display part shows .

Press the Mode Selection key,  to set the display part to 7 and check the display part.

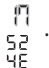➔ The display part shows .

**Step 4 : Pressing the ON/OFF button (  )**

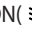When pressing the operation ON/OFF key with the direction of remote control for unit, the sound "Ding" or "Diriring" is heard and the OPERATION ICON(  ) lamp of the display is flickering at the same time, then the input of option is completed. (If the diriring sound isn't heard, try again pressing the ON/OFF button.)

**Step 5 : Unit operation test-run**

**First,** Remove the battery from the remote control.

**Second,** Re-insert the battery into the remote control.

**Third,** Press ON/OFF key with the direction of remote control for set.

**• Error Mode**

- 1<sup>st</sup> If all lamps of indoor unit are flickering, Plug out, plug in power plug again and press ON/OFF key to retry.
- 2<sup>nd</sup> If the unit is not working properly or all lamps are continuously flickering after setting the option code, see if the correct option code is set up for its model.

■ OPTION ITEMS

REMOCON MODEL	SEG1	SEG2	SEG3	SEG4	SEG5	SEG6	SEG7	SEG8	SEG9	SEG10	SEG11	SEG12
AQV18NSAN AQV18FCN	0	A	D	7	7	7	1	7	5	2	6	E
AQV24NSAN AQV24FCN	0	B	C	7	7	7	1	7	5	2	6	E