
3. Alignment and Adjustments

3-1 Test Mode

■ How to Approach Test Mode

You can approach the Test Mode by pressing the on/off switch of indoor unit for 5 seconds.

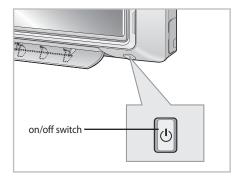

■ Test Mode Operation Option

After installing the air conditioner, check whether each subordinate is normally operated or not by operating the Test Mode.

- When an error occurs, display the Error Mode.
- **Operation Mode :** Cool mode. Operate the cool mode by operating the compressor by force without the compressor ON/OFF according to the set temperature/indoor temperature. (Do not follow the antifreeze control)
- **Up-down louver :** Up-down swing mode
- Indoor Fan : High



• Because the Test Mode operate the cool mode by force not related to the set temperature / indoor temperature, check whether each subordinate is operated normally or not after completing installation and must turn off the power of the air conditioner.

Samsung Electronics 3-1

3-2-1 Indoor Display Error and Check Method

ER	ROR	MODE	DESCRIPTION
Oper.	Timer	Good Sleep	DESCRIPTION
×	0	0	Communication error (indoor<->outdoor) Pre power relay error
×	0	×	Indoor room temp sensor error
0	0	×	Evap in temp sensor error
×	×	0	Fan error(indoor)
0	×	0	Ourdoor error display
0	0	0	EEPROM error
	0	0	Option error

▶ LED ON○ LED BLINKING× LED OFF

3-2 Samsung Electronics

3-2-2 Outdoor LED Display Error and Check Method

LED	PATI	ΓERN	DECCDIDITON
YEL	GRN	RED	DESCRIPTION
			Power Off / VDD NG
0	0		Normal Operation
0000		0	IPM Over Current(O.C)
0	0		Abnormal Serial communication
	_		(Display Board:Indoor<->Outdoor)
	\odot	\circ	Comp Starting error
0		0	DC-Link voltage under/over error PFC over load / HW DC_link over
	0	0	Outdoor temp sensor error(Dual/Single)
			Discharge over temperature(Dual/Single)
	0	O	Discharge temp sensor error(Dual/Single)
			Current sensor error/Heatsink sensor error
			Input current sensor error
0		\circ	Comp Vlimit error/Heatsink over temp
0		0	Coil temp sensor error(Dual/Single)
			1min. Time out Comm.
			(Main <-> Inverter)
			Fan error EEProm data error
	0		OTP error
	0		Comp rotation error
	0	0	Operation condition secession(Dual only)
	0		DC-Link voltage sensor error
	0		I-Trip error / PFC Over current
		0	GAS Leak error(Dual/Single)
		0	AC Line Zero Cross Signal out
			Power ON reset (1sec)
0	0		capacity miss match
0	0		Test Operation Cooling Mode
	0	0	Test Operation Heating Mode

● LED ON ○ LED OFF ◎ LED BLINKING

Samsung Electronics 3-3

3-3 Setting Option Setup Method

ex) Option No.:



NOTE:

SEG1, SEG13, SEG19 need not to be pressed in, so in fact the Option No. we should press in is as below. 12305 7427d 7444E 78200 34646 04442

Step 1: Enter the Option Setup mode.

1st Take out the batteries of remote control.

2nd Press the temperature the battery again.




button simultaneously and insert

3rd Make sure the remote contr display shown as






Step 2: Enter the Option Setup mode and select your option according to the following procedure.

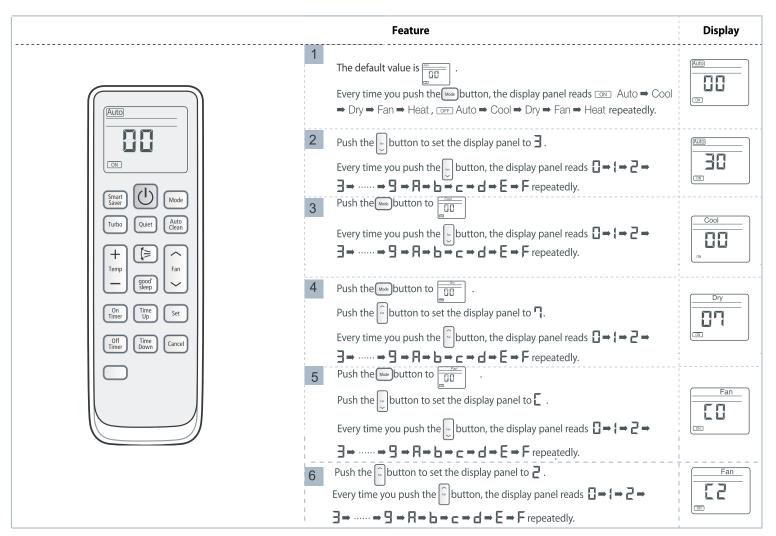

Samsung Electronics 3-4

3-3 Setting Option Setup Method(continue)

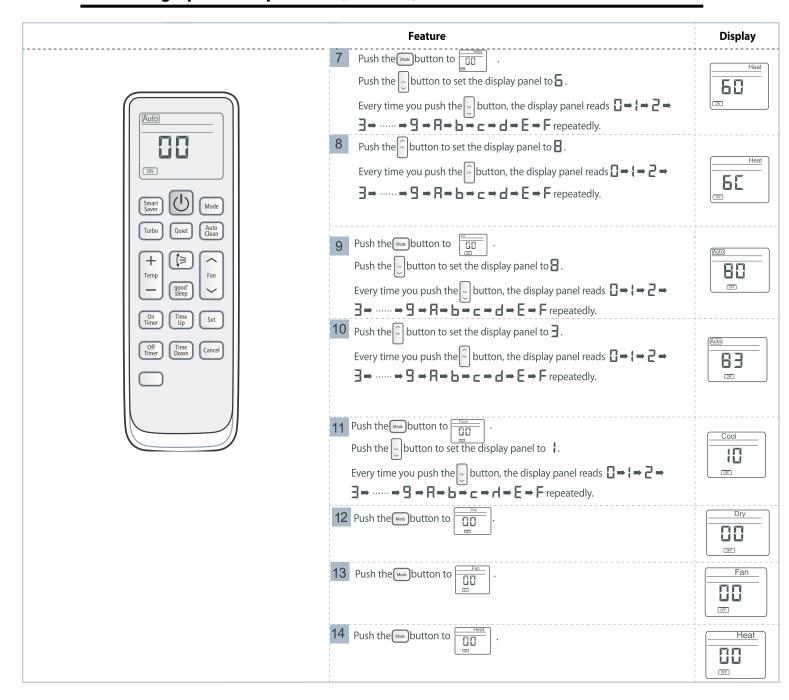

Step 3: Upon completion of the selection, check you made right selections.

Press the Mode Selection key to set the display part and check the display part.

→ The display part shows like below when each time you press Mode button .



Step 4: Pressing the ON/OFF button ((1))

When pressing the operation $\overline{ON/OFF}$ key with the direction of remote control for unit, the sound "Ding" or "Diriring" is heard and the $\overline{OPERATION}$ ICON(\overline{SOE}) lamp of the display is flickering at the same time, then the input of option is completed. (If the diriring sound isn't heard, try again pressing the $\overline{ON/OFF}$ button.)

3-5 Samsung Electronics

Step 4: Pressing the ON/OFF button ((1))

When pressing the operation ON/OFF key with the direction of remote control for unit, the sound "Ding" is heard and the OPERATION ICON(\lessapprox) lamp of the display is flickering at the same time, then the input of option is completed. (If the diriring sound isn't heard, try again pressing the ON/OFF button.)

Step 5: Unit operation test-run

First, Remove the battery from the remote control.

Second, Re-insert the battery into the remote control.

Third, Press ON/OFF key with the direction of remote control for set.

• Error Mode

- 1st If all lamps of indoor unit are flickering, Plug out, plug in power plug again and press ON/OFF key to retry.
- 2nd If the unit is not working properly or all lamps are continuously flickering after setting the option code, see if the correct option code is set up for its model.

■ OPTION ITEMS AQV18PSB

SEG 1-6						SEG 7-12							SEG 13-18						SEG 19-24						SEG 25-30						SEG 31-36					
I	0	1	2	3	0	5	1	7	4	2	1	D	2	7	3	2	3	С	3	7	2	6	0	0	0	3	4	7	4	3	1	1	3	F	4	7

■ OPTION ITEMS AQV24PSB

SEG 1-	-6	SEG 7-12							SEG 13-18						SEG 19-24						SEG 25-30						SEG 31-36				
0 1 2 3	0 5	1	7	4	2	7	В	2	7	4	4	4	Е	3	7	8	2	0	0	0	3	4	C	4	В	1	0	4	4	4	2

3-6 Samsung Electronics