


OUTDOOR UNIT

AR18HSFNBWKXEU

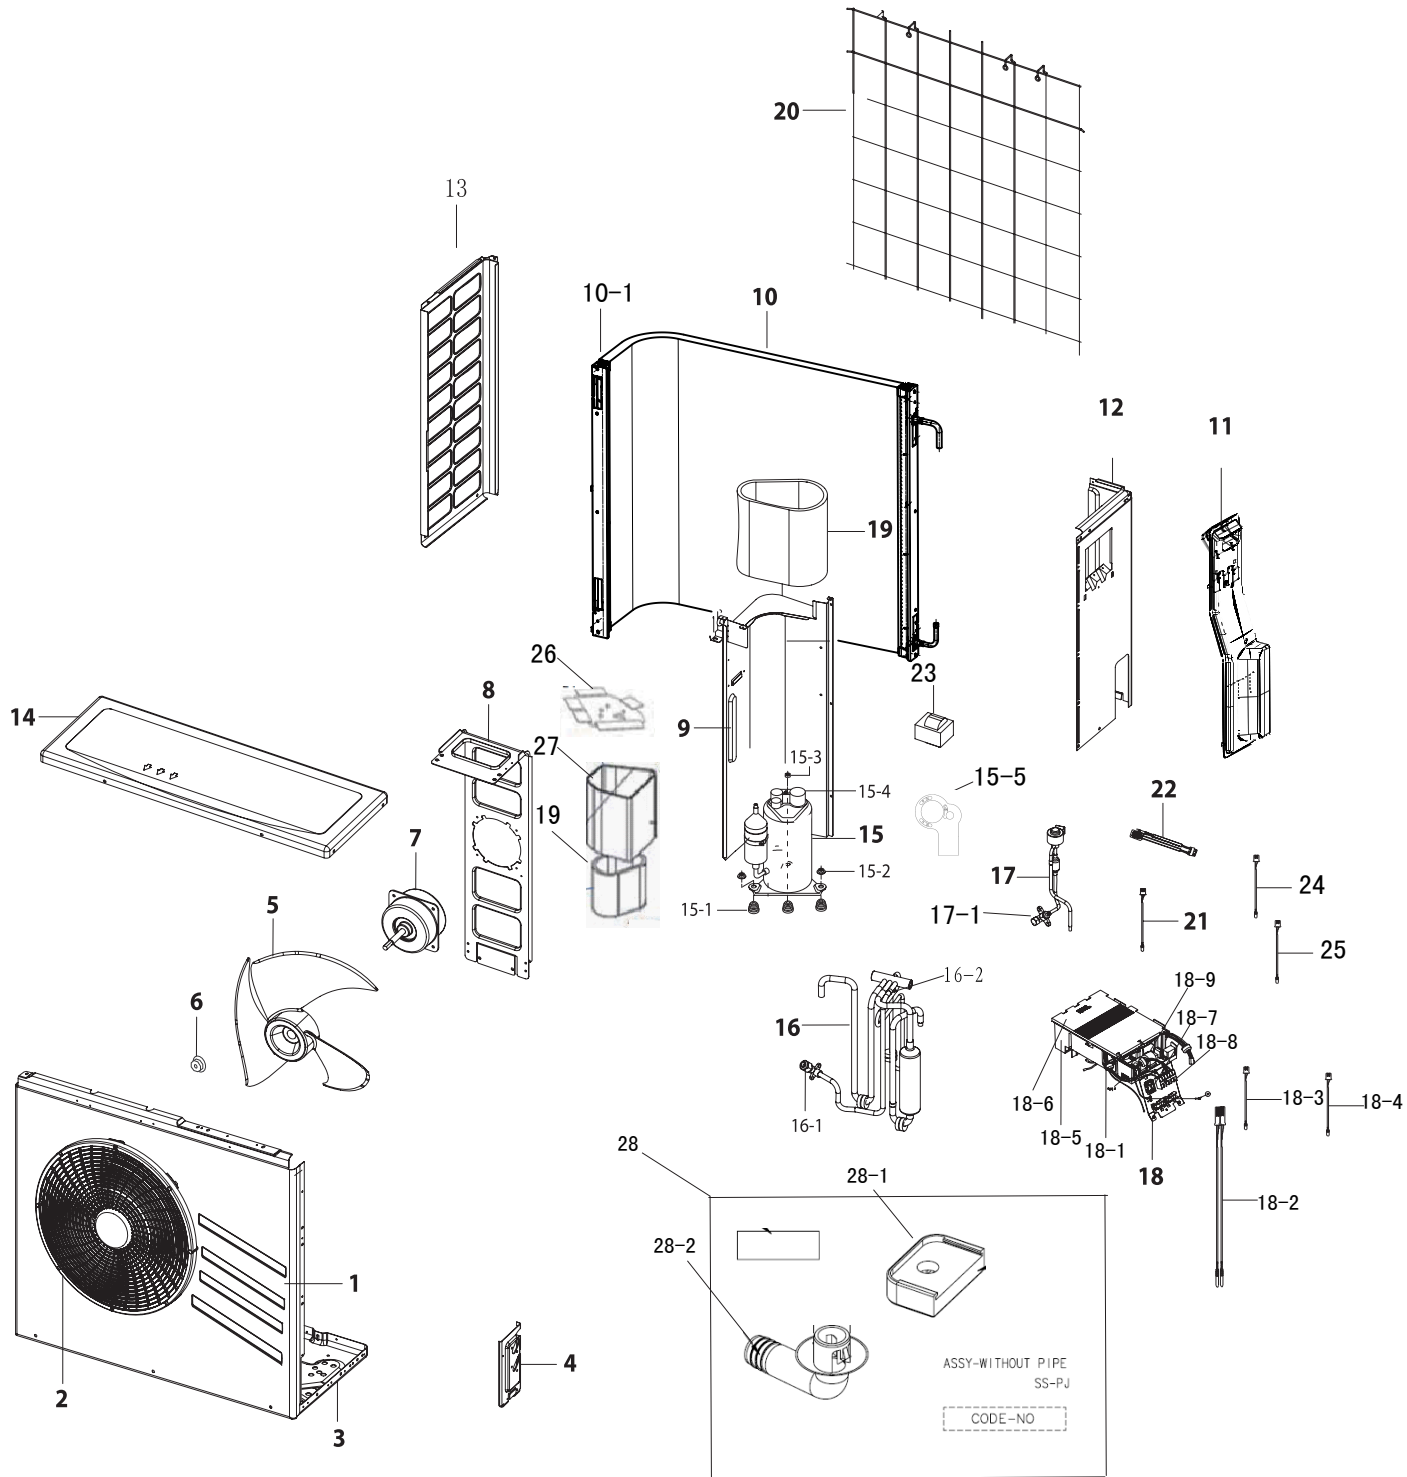

Parts List

AR18HSFNBWKXEU

NO	Parts Code	Parts Description	Quantity	Service
1	DB90-07180V	ASSY CABI FRONT	1	SA
2	DB63-00838C	GUARD FAN	1	SA
3	DB90-07169U	ASSY BASE OUT-TOTAL	1	SNA
4	DB61-01593C	BRACKET-VALVE	1	SA
5	DB67-01408A	FAN PROPELLER	1	SA
6	DB60-30020A	NUT-HEXAGON FLANGE	1	SNA
7	DB31-00642A	MOTOR BLDC FAN	1	SNA
8	DB61-05885A	BRACKET MOTOR	1	SA
9	DB94-03705B	ASSY PARTITION	1	SNA
10	DB96-19010B	ASSY COND BENDING	1	SNA
10-1	DB61-05867A	HOLDER-COND LOW	4	SNA
11	DB90-07459E	ASSY COVER-VALVE	1	SNA
12	DB90-07173N	ASSY CABINET-SIDE RH	1	SA
13	DB90-07172D	ASSY CABI LF	1	SA
14	DB90-07183C	ASSY CABINET-UP	1	SA
15	UG4T150LNBEQSS	RCP, 44 TWIN A INV, L, R410A	1	-
15-1	DB63-02296A	GROMMET ISOLATOR	3	SNA
15-2	DB60-30028A	NUT-FLANGE	3	SNA
15-3	6021-001142	NUT-HEXAGON FLANGE	1	SNA
15-4	DB63-02310A	COVER TERMINAL	1	SA
15-5	DB63-00817B	GASKET	1	SA
16	DB96-19492A	ASSY TUBE 4WAY	1	SA
16-1	DB62-02285A	VALVE SERVICE-SPINDLE	1	SA
16-2	DB96-06998F	ASSY-SOLENOID COIL	1	SA
17	DB96-19493A	ASSY TUBE EEV	1	SA
17-1	DB62-02283A	VALVE SERVICE-SPINDLE	1	SNA
18	DB93-14201D	ASSY CONTROL OUT	1	SNA
18-1	DB92-02866A	ASSY PCB MAIN	1	SA
18-2	DB93-14275A	ASSY CONNECTOR WIRE-POWER	1	SA
18-3	DB93-14276A	ASSY CONNECTOR WIRE-DC SIGNAL	1	SA
18-4	DB93-14277A	ASSY CONNECTOR WIRE-DC SIGNAL	1	SA
18-5	DB90-07729A	ASSY COVER CONTROL-UP	1	SA
18-6	DB90-07833A	ASSY CASE CONTROL	1	SA
18-7	DB65-00274A	TERMINAL BLOCK	1	SA
18-8	DB65-00298B	TERMINAL BLOCK	1	SA
18-9	DB92-02862A	ASSY MODULE	1	SA
19	DB63-02344A	FELT-COMP SIDE	1	SA
20	DB63-03321A	GUARD-COND BAR	1	SNA
21	DB93-09493C	ASSY CONNECTOR WIRE	1	SA
22	DB93-09497E	ASSY CONNECTOR WIRE	1	SA
23	DB27-00042B	COIL CHOKE-REACTOR	1	SC
24	DB93-11244B	ASSY CONNECTOR WIRE	1	SA
25	DB95-05164B	ASSY THERMISTOR OUT	1	SNA
26	DB63-03458A	FELT-COMP TOP OUT	1	SNA
27	DB63-02343A	FELT-COMP SIDE OUT	1	SA
28	DB97-02066C	ASSY ACCESSORY	1	SA
28-1	DB73-20134A	RUBBER-LEG	4	SA
28-2	DB67-20011A	DRAIN-PLUG OUT	1	SNA